

LAICA




MikroPLASTIK-STOP™ PITCHER

The first filter water filter jug that removes microplastics (it blocks particles $\geq 0.1 \mu\text{m}$).

Two filters, one pitcher, zero plastic particles in your drinking water

LAICA solution:

Bi-flux® cartridge +
MikroPLASTIK-STOP™ filter

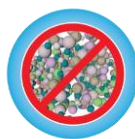

Reduces more
than 99,99%*
of microplastics

The system is equipped with:

1 MikroPLASTIK-STOP™ filter

Filter's lifetime: 1 year /1000 liters
Its lifetime is related to the turbidity of the tap water. The filter stops working when its ultra-filtration pores are completely blocked.

1 MikroPLASTIK-STOP™ activation pump

(manual piston module consisting of 2 components: a cylinder and a piston for preparing the MikroPLASTIK-STOP™ filter).

3 Bi-flux® cartridges

Cartridge's life time: cartridge lasts up to 30 days or 150 l.

3 cartridges = 3 months of filtered water

1 instruction manual

1 leaflet esplicativo

All jug parts, except the cartridge and the filter, must be hand washed with lukewarm water and dishwashing liquid.

Bi-flux® cartridge

reduces the hardness of tap water, preserving the mineral salts useful to the body. Bi-flux® cartridge also reduces:
chemical contaminants,
heavy metals and chlorine.

MikroPLASTIK-STOP™ Filter

Blocks microplastics (diameter $\geq 0.1 \mu\text{m}$) and eliminates turbidity.



*The efficacy of the MikroPLASTIK-STOP™ filter has been tested by independent accredited laboratories in Germany and Italy.

The MikroPLASTIK-STOP™ filter blocks more than 99.5% of microplastics with sizes $\geq 0.1 \mu\text{m}$ eventually present in tap water.

For particles $\geq 1 \mu\text{m}$, the reduction rate is $\geq 99,99\%$.

MikroPLASTIK-STOP™ pitcher Features:

- Made in Italy
- Italian design
- Coloured finish for lid and handle
- Flow "n" go automatic pourthrough lid
- Anti dust lid and spout protection cover
- Its sleek shape allows to fit into the fridge door
- The manual indicator helps to memorize when the cartridge has to be replaced
- Only food grade materials are used in jugs and cartridges production
- Sustainable packaging: the product packaging is made with recycled raw materials



Manual cartridge life indicator, silver effect

Code	Product dimensions	Net weight kg	Total capacity	Filtered water	Color	EAN	Quantity Master Carton
UFSBE02	A= 278 P= 114 L= 278	0,95	3 L	2 L	AQUA	8013240706979	2 pcs



Tested by
accredited and
independent Labs



LAICA S.p.A. - Viale del Lavoro, 10 – 36048 Barbarano Mossano (VI) - Italy - Phone +39 0444.795314 – info@laica.com www.laica.com